


# **dji** GOGGLES N3

## User Manual

v1.0 2024.11

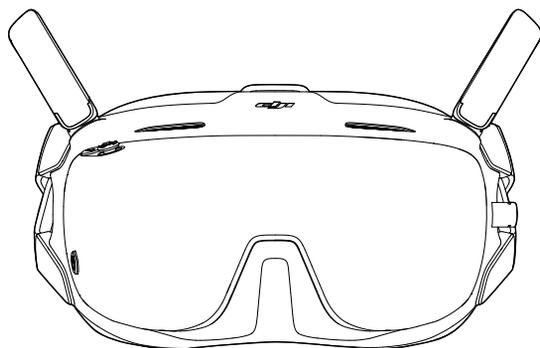



This document is copyrighted by DJI with all rights reserved. Unless otherwise authorized by DJI, you are not eligible to use or allow others to use the document or any part of the document by reproducing, transferring or selling the document. Only refer to this document and the content thereof as instructions to operate DJI products. The document should not be used for other purposes.

In the event of divergence among different versions, the English version shall prevail.

### **Searching for Keywords**

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

### **Navigating to a Topic**

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

### **Printing this Document**

This document supports high resolution printing.

# Using the Manual

## Legend

△ Important

💡 Hints and Tips

📖 Reference

## Read Before Use

DJI™ provides you with tutorial videos and the following documents:

1. *Safety Guidelines*
2. *Quick Start Guide*
3. *User Manual*

It is recommended to watch all the tutorial videos and read the *Safety Guidelines* before using for the first time. Make sure to review the *Quick Start Guide* before using for the first time and refer to this *User Manual* for more information.

## Video Tutorials

Go to the address below or scan the QR code to watch the tutorial videos, which demonstrate how to use the product safely:



<https://www.dji.com/goggles-n3/video>

## Download the DJI Fly App



- 💡 • To check the Android and iOS operating system versions supported by DJI Fly, visit <https://www.dji.com/downloads/djiapp/dji-fly>.

- The interface and functions of DJI Fly may vary as the software version is updated. Actual user experience is based on the software version used.
- 

## Download DJI Assistant 2

Download DJI ASSISTANT™ 2 (Consumer Drones Series) at:



<https://www.dji.com/downloads/softwares/dji-assistant-2-consumer-drones-series>

# Contents

<b>Using the Manual</b>	<b>3</b>
Legend	3
Read Before Use	3
Video Tutorials	3
Download the DJI Fly App	3
Download DJI Assistant 2	4
<b>1 Overview</b>	<b>7</b>
<b>2 Preparing the Goggles</b>	<b>8</b>
2.1 Powering on the Goggles	8
2.2 Wearing the Goggles	9
<b>3 Activation</b>	<b>11</b>
<b>4 Linking</b>	<b>12</b>
4.1 Linking via DJI Fly App (recommended)	12
4.2 Linking via Button	12
<b>5 Using the Goggles</b>	<b>14</b>
5.1 FPV View	14
5.2 Goggles Buttons	14
Opening the Menu	15
Shortcut Menu	15
Camera Settings	15
Goggles Menu	16
Controlling Video Playback	17
5.3 AR Cursor	17
Recenter the Cursor	17
Operating the Menu	18
Controlling Video Playback	20
5.4 Goggles Footage Storage and Export	20
Footage Storage	20
Footage Export	20
Formatting the SD Card	21
5.5 Liveview Sharing	21
Wired Connection with Smartphone	21
Broadcasting to Other Goggles	22
5.6 Panorama Video Playback	22
5.7 Head Tracking	22

<b>6</b>	<b>Maintenance</b>	<b>23</b>
6.1	Replacing the Foam Padding	23
6.2	Cleaning and Maintenance	23
<b>7</b>	<b>Appendix</b>	<b>25</b>
7.1	Specifications	25
7.2	Updating Firmware	25
7.3	Compatibility	26
7.4	Risk and Warnings	26
7.5	Troubleshooting	26
7.6	Direct Remote ID	27
7.7	Aftersales Information	27

# 1 Overview

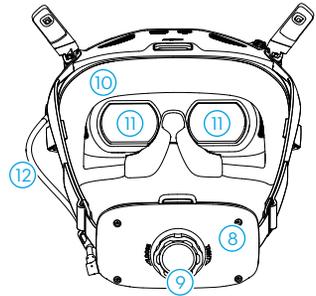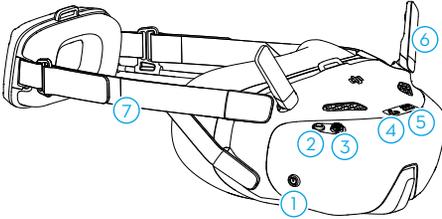


1. Power Button
2. Back Button
3. 5D Button
4. USB-C Port
5. microSD Card Slot
6. Antennas
7. Headband
8. Battery Compartment
9. Headband Adjustment Knob
10. Foam Padding
11. Lens
12. Power Cable



- When the goggles are connected to a smartphone or a PC, if the devices do not respond after connecting, go to the goggles menu and select **Settings > About**, and enter the OTG Wired Connection mode. If the devices still do not respond after connecting, use a different data cable and try again.

## 2 Preparing the Goggles

### 2.1 Powering on the Goggles

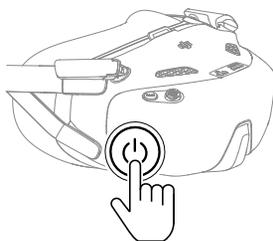


Press the power button once to check the current battery level.

Press once, then press and hold for two seconds to power the goggles on or off.

Blinking Pattern	Battery Level
 — Solid Green	40-100%
 — Solid Yellow	11-39%
 — Solid Red	1-10%

If the battery level is low, it is recommended to use a USB charger to charge the device.

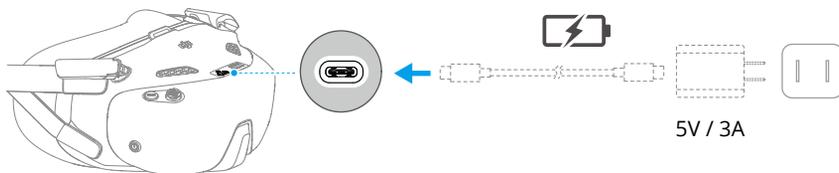


The table below shows the battery level during charging:

Blinking Pattern	Battery Level
 — Pulses Yellow	1-39%
 — Pulses Green	40-99%
 — Solid Green	100%


## 2.2 Wearing the Goggles

- ⚠ • Fold the antennas to avoid damage when the goggles are not in use.
- DO NOT tear or scratch the foam padding, and the soft side of the battery compartment, or other components with sharp objects.
- The power cable is non-detachable. DO NOT pull the power cable with force to avoid damage.



1. Unfold the antennas.

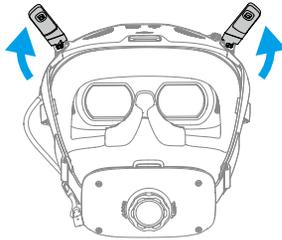

2. Put on the goggles after the devices are powered on.

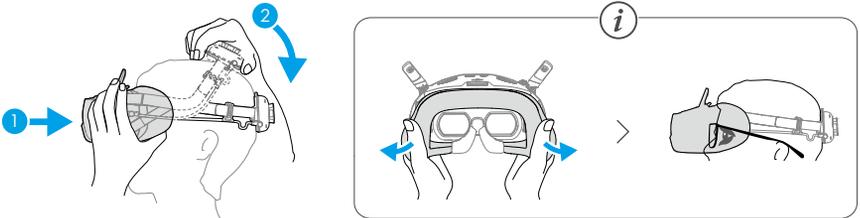


3. Rotate the headband adjustment knob on the battery compartment to adjust the length of the headband.

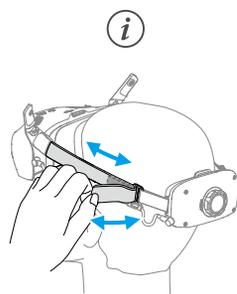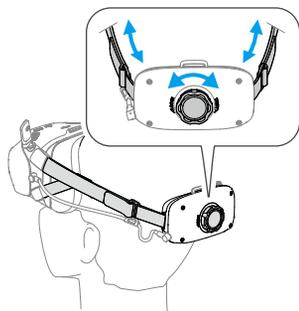

## 3 Activation

The goggles must be activated and updated before using for the first time.

Connect the USB-C port of the goggles to the smartphone. Run DJI Fly app and follow the on-screen instructions to activate the device and update the firmware. Make sure the smartphone is connected to the internet during activation.

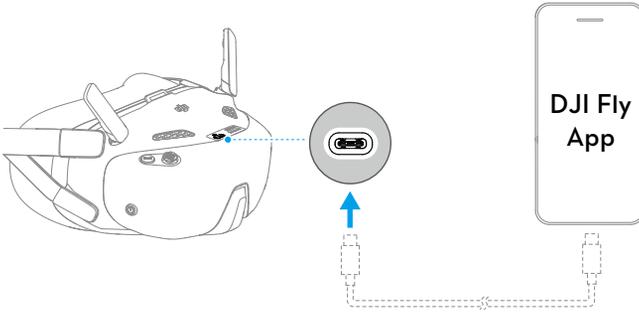

## 4 Linking

Preparation before linking:

1. Power on the aircraft, the goggles, and the remote control device before linking. Make sure the devices are within 0.5 m of each other during linking. Make sure the devices are updated to the latest firmware version and have enough battery level.
2. Open the goggles menu, select **Status** and make sure that the aircraft model displayed at the top of the menu is correct. Otherwise, select **Switch** from the upper right corner of the menu and then select the correct aircraft.

### 4.1 Linking via DJI Fly App (recommended)

Keep the goggles connected to the smartphone after activation. Tap **Connection Guide** on DJI Fly from the smartphone and follow the on-screen instructions for linking.



### 4.2 Linking via Button


1. Linking the aircraft and the goggles:



- a. Press and hold the power button on the aircraft until it beeps once and the battery level LEDs start to blink in sequence.
- b. Press and hold the power button on the goggles until the goggles start to beep continuously and the power button starts to blink yellow.

- c. Once linking is completed, the battery level LEDs of the aircraft turn solid and display the battery level, the goggles stop beeping, and image transmission can be displayed normally.

## 2. Linking the goggles and remote control device:

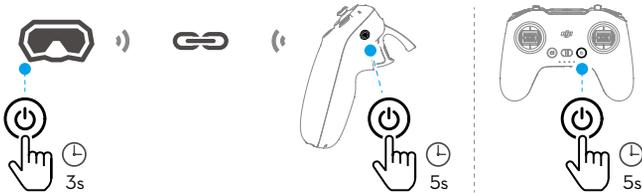


- a. Press and hold the power button on the goggles until the goggles start to beep continuously and the power button starts to blink yellow.
- b. Press and hold the power button on the remote control device until it starts to beep continuously and the battery level LEDs start to blink in sequence.
- c. Once linking is completed, the goggles and remote control device stop beeping and display the battery level.

- 
- ⚠** • The aircraft can be controlled with only one remote control device during flight. If the aircraft has been linked with multiple remote control devices, turn off the other remote control devices before linking.
-

## 5 Using the Goggles


- ⚠ • Using the goggles does not satisfy the requirement of visual line of sight (VLOS). Some countries or regions require a visual observer to assist during flight. Make sure to comply with local regulations when using the goggles. Fly the aircraft in environments with good lighting and visibility.
- 💡 • The actual screen interface may differ from the descriptions in this manual, and vary depending on the aircraft used and the firmware version of the goggles.

### 5.1 FPV View

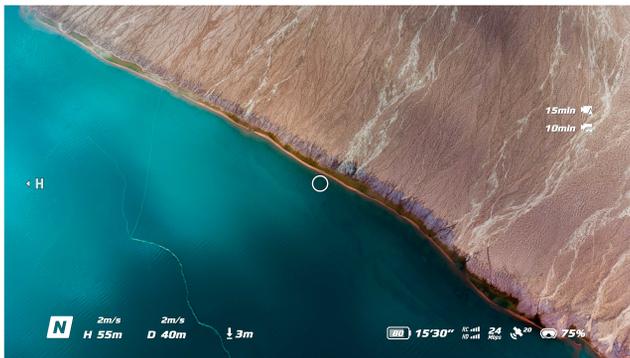

- 💡 • When controlling the aircraft with the motion controller, the circle indicates the direction in which the aircraft is heading.

### 5.2 Goggles Buttons

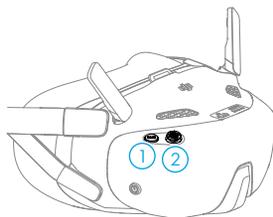

#### 1. Back Button

Press to return to the previous menu or exit the current view.

## 2. 5D Button



Press or push to open different menus from the FPV view of the goggles. After the menu is opened, push to navigate through the menu or adjust the parameter value. Press to confirm the selection.

During video playback, press the button to control it.

## Opening the Menu

### Shortcut Menu



Push the 5D button backward from the FPV view to open the shortcut menu.

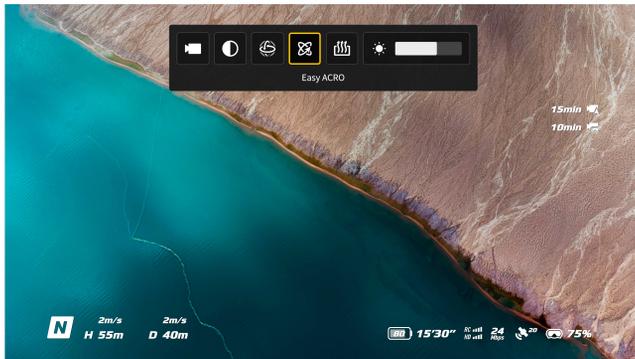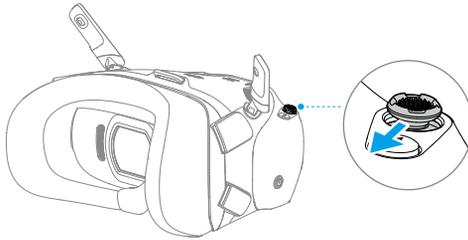

## Camera Settings


Push the 5D button forward from the FPV view to open the camera settings panel.

In the parameter panel, push to the right to view and set more parameters.

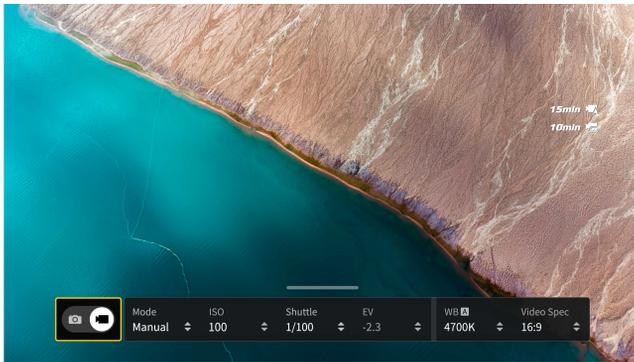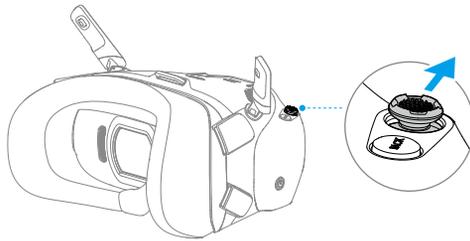

## Goggles Menu

Press down the 5D button or push it to the right from the FPV view to open the menu.

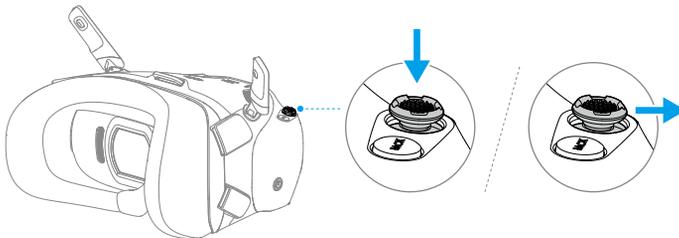

- Enter **Settings > Safety**, Camera View Before Loss helps to find the location of the aircraft by using the captured video of the aircraft within a period before the signal is lost. If the aircraft still has signal and battery power, turn on ESC beeping to locate the aircraft using a beeping sound that is emitted from the aircraft.

- Enter **Settings > Control** to view the goggles tutorial.

## Controlling Video Playback

When playing videos stored on the microSD card of the goggles, the 5D button can be used to control playback such as:

- Press the button to pause or continue to play.
- Push the button left or right to adjust the progress bar.
- Push the button backward to enter playback settings and adjust the screen brightness or volume.

### 5.3 AR Cursor

- 💡 • AR Cursor is only supported when used with DJI RC Motion 3 (hereinafter referred to as motion controller).


- ⚠️ • AR Cursor cannot function properly when being used on moving objects, such as cars and ships.

Before takeoff or when using the lock button to trigger the aircraft to hover, users can use the AR Cursor (the white line with a circle at the end) to interact with the screen of the goggles.



### Recenter the Cursor


If the cursor is not displayed on the screen of the goggles, hold the motion controller as shown below, and then press and hold the dial on the left side of the motion controller to recenter the cursor.

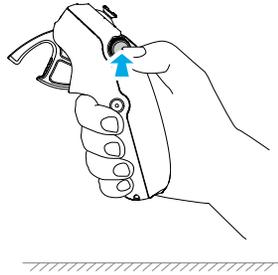


If the cursor still cannot be found, tilt the motion controller up or down until the cursor appears on the screen.

## Operating the Menu

- Using motion controller movements, move the cursor to the arrow on the left side of the screen. Gently press the accelerator to the first stop position, then the cursor will become small and the menu will be opened.

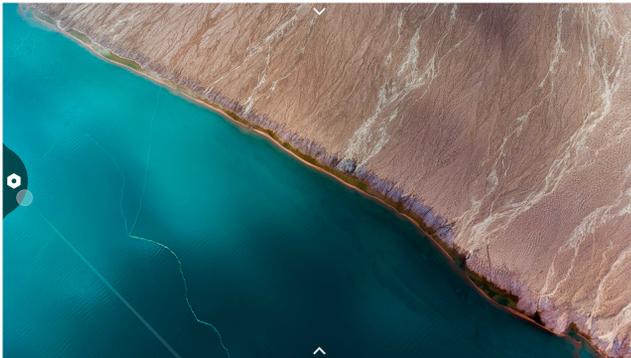

Use the joystick on the motion controller to scroll up or down in the menu.

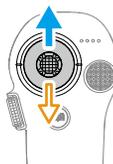

To exit or return to the previous menu, push the accelerator forward, or gently press the accelerator when the cursor is on any empty spot on the screen.


- Move the cursor to the arrow on the top of the screen, press the accelerator to enter the shortcut menu, and configure settings such as recording.



- Move the cursor to the arrow on the bottom of the screen, press the accelerator to enter camera settings, and configure settings for the parameters of the aircraft camera.



Use the joystick on the motion controller to scroll left or right in the menu.

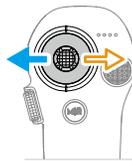


## Controlling Video Playback

When playing videos stored on the microSD card of the goggles, the cursor can be used to control playback such as:

- Press the accelerator to pause or continue to play, push the accelerator forward to exit.
- Move the cursor left or right while pressing the accelerator down to adjust the progress bar.
- Move the cursor to the arrow on the top of the screen, press down the accelerator to enter playback settings and adjust the screen brightness or volume.

## 5.4 Goggles Footage Storage and Export

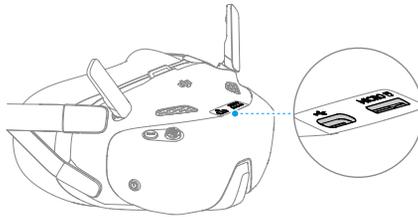

### Footage Storage

The goggles support the installation of a microSD card. After a microSD card is inserted, if Record With is set to both the aircraft and the goggles, while the aircraft is recording video, the goggles will simultaneously record the liveview displayed on the screen and store it on the microSD card of the goggles.

### Footage Export

The recorded footage can be exported via the following methods.

- Power on the goggles. Connect the USB-C port of the goggles to a PC, and follow the on-screen prompts to export the footage.
- Remove the microSD card from the goggles and insert it into a card reader, and export the footage in the microSD card through the card reader.

The screen recording includes the OSD elements by default. To record the screen without the OSD elements, change the settings as shown below:

1. Open the goggles menu.
2. Select **Settings > Camera > Advanced Camera Settings**, and disable **Camera View Recording**.

## Formatting the SD Card

To format the microSD card, follow the steps as shown below:

1. Open the goggles menu.
2. Select **Settings > Camera > Format**.
3. Select the storage device to format and follow the on-screen instructions to complete the operation.



- Data cannot be recovered after formatting. Operate with caution.
- 

## 5.5 Liveview Sharing

DJI Goggles N3 can share a flight liveview via the following methods.



- Power on the aircraft, goggles, and remote control device. Make sure all the devices are linked.



- Operate Liveview Sharing prior to taking off, or when the aircraft is braking or hovering, to avoid interfering with the pilot's operation.
  - The goggles only support connecting to one smartphone for sharing the liveview at a time. Other smartphones cannot be connected during this period.
  - When connected to a smartphone, liveview sharing will be paused when viewing the images or videos in the album. Exit the album to recover sharing.
  - When using the broadcasting mode, the audience and the pilot goggles must select the same aircraft model.
- 

## Wired Connection with Smartphone

1. Connect the USB-C port of the goggles to the smartphone.
2. Launch DJI Fly app and tap **GO FLY** in the lower right corner of the screen to enter the liveview.

## Broadcasting to Other Goggles

1. Enter the DJI Goggles N3 menu, select **Transmission** and enter the **Pilot** sub-menu.
2. Turn on Broadcasting mode, and the device number will be displayed.
3. On the other goggles, enter the goggles menu, select **Transmission** and enter the **Audience** sub-menu.
4. If any nearby goggles turns on the Broadcasting mode, the device and its signal strength can be viewed in the **Audience** sub-menu. Select the device number to access the liveview. Switching to **Pilot** sub-menu to exit the shared liveview.

## 5.6 Panorama Video Playback

1. Import videos to a microSD card, and insert it into the goggles.
2. Enter the goggles menu and then **Album**, then select the video file to play.
3. Push the 5D button backward to open the playback menu, and select  for display switch settings.
4. Exit the shortcut menu after confirming the selections, then the video will be played based on the display settings.



- Refer to DJI official website for more information about the supported video formats. <https://www.dji.com/goggles-n3/specs>
  - The goggles have no speaker but can be connected to headphones via the USB-C port. Only supports Type-C headphones with built-in DAC (digital-to-analog converter).
- 

## 5.7 Head Tracking


Head tracking is only supported by certain aircraft and can be enabled by selecting  in the shortcut menu of the goggles.

After enabling head tracking, the horizontal orientation of the aircraft and the gimbal tilt can be controlled using head movements during flight. The remote control device will only control the flight path of the aircraft, the gimbal cannot be controlled.


## 6 Maintenance

### 6.1 Replacing the Foam Padding

1. Hold the position as shown below and remove the foam padding gently.

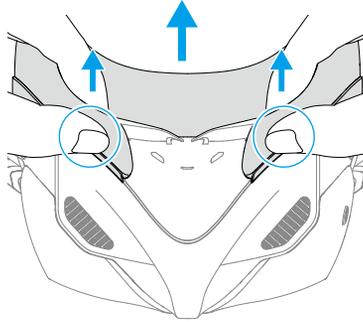

2. Align the positioning columns of the new foam padding with the positioning holes on the goggles. Install it and press along the contour. After hearing a clicking sound, check and make sure that there is no gap between the foam padding and the goggles.

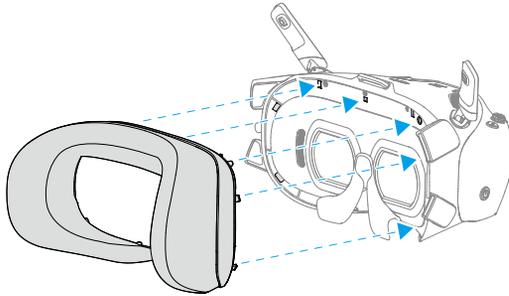

### 6.2 Cleaning and Maintenance

Clean the surface of the goggles with a soft, dry, clean cloth. Use the lens cleaning cloth to clean the lenses in a circular motion from the center to the outer edges.

- ⚠ • DO NOT clean the integrated goggle lenses with alcohol wipes.
- Clean the lenses gently. DO NOT scratch them as this will affect viewing quality.

- DO NOT use alcohol or other cleanser to wipe the foam padding and the soft side of the battery compartment.
  - DO NOT tear or scratch the foam padding, and the soft side of the battery compartment, or other components with sharp objects.
  - Store the goggles in a dry place at room temperature to avoid damage to the lenses and other optical components from high temperatures and humid environments.
  - Keep the lenses away from direct sunlight to avoid screen damage.
-

## 7 Appendix

### 7.1 Specifications

Visit the following website for specifications.

<https://www.dji.com/goggles-n3/specs>

### 7.2 Updating Firmware

Use one of the following methods to update the firmware:

#### Using DJI Fly App

When used with DJI Neo or DJI Avata 2, the aircraft, goggles, and remote control device can be updated together.

Power on the aircraft, goggles, and remote control device. Make sure all the devices are linked. Connect the USB-C port of the goggles to the smartphone. Run DJI Fly, and follow the prompt to update. An internet connection is required.

#### Using DJI Assistant 2 (Consumer Drones Series)

1. Power on the device. Connect the device to a computer with a USB-C cable.
2. Launch DJI Assistant 2 and log in with your DJI account.
3. Select the device and click **Firmware Update** on the left side of the screen.
4. Select the firmware version.
5. Wait for the firmware to download. The firmware update will start automatically. Wait for the firmware update to complete.



- Make sure to follow all the steps to update the firmware, otherwise the update may fail.
  - The firmware update will take several minutes. It is normal for the screen to turn off or the goggles to restart automatically during the update. Wait patiently for the firmware update to complete.
  - Make sure the computer is connected to the internet during the update.
  - Make sure the device has sufficient power before updating the firmware.
  - DO NOT unplug the USB-C cable during the update.
  - Note that the update may reset the parameters. Before updating, take note of your preferred settings and reconfigure them after the update.
-

Visit the following link and refer to the Release Notes for firmware update information:

<https://www.dji.com/goggles-n3/downloads>

### 7.3 Compatibility

Visit the following website to get the information on compatible products.

<https://www.dji.com/goggles-n3/faq>

### 7.4 Risk and Warnings

When the aircraft detects any risk after powering on, there will be a warning prompt on the goggles screen. Pay attention to the prompt during flight and take necessary actions accordingly to avoid product damage or risk of injury.

If the Signal Lost Action of the aircraft is set to RTH, when the control signal or transmission is lost during flight, the aircraft will automatically initiate Failsafe RTH and fly back to the last recorded Home Point.

In emergency situations during flight, such as if a collision occurs, a motor stalls, the aircraft rolls in the air, or the aircraft is out of control and is ascending or descending quickly, the motors can be stopped by pressing the motion controller lock button four times.

---

 • Stopping motors mid-flight will cause the aircraft to crash. Operate with caution.

---

If the goggles screen goes off unexpectedly during flight, press the motion controller lock button once to brake the aircraft first, and then initiate RTH manually. After the aircraft is back, check the goggles power level and try to restart the goggles. If the problem persists, contact DJI support.

### 7.5 Troubleshooting

#### 1. Power-on and start-up problems

Check if the battery has power. Contact DJI support if it cannot be started normally.

#### 2. Power-off and shutdown problems

Contact DJI support.

#### 3. The device is not functioning after powering on.

Contact DJI Support.

#### 4. SW update issues

Follow the instructions in the user manual to update the firmware. If the firmware update fails, restart all the devices and try again. If the problem persists, contact DJI support.

#### 5. Procedures to reset to factory default or last known working configuration

Open the goggles menu and select **Settings > About > Reset All**.

#### 6. How to restore use after long-term storage?

Fully charge the device first and then it can be used normally.

## 7.6 Direct Remote ID

Method of uploading the UAS Operator Registration Number to the aircraft:

1. Connect the goggles to the mobile device.
2. Launch DJI Fly on the mobile device.
3. Enter DJI Fly, select **Safety > UAS Remote Identification**, and then upload UAS Operator Registration Number.

## 7.7 Aftersales Information

Visit <https://www.dji.com/support> to learn more about aftersales service policies, repair services, and support.



Contact  
DJI SUPPORT

This content is subject to change without notice.  
Download the latest version from



<https://www.dji.com/goggles-n3/downloads>

If you have any questions about this document, please contact DJI by sending a message to [DocSupport@dji.com](mailto:DocSupport@dji.com).

DJI is a trademark of DJI.  
Copyright © 2024 DJI All Rights Reserved.